



DX-1G/2G Basic User Setup

Fully charge and insert Li-Ion battery (included with camera), insert up to a 4GB memory card for DX-1G or up to a 16GB SDHC card for DX-2G.

Please note that the following setup options are recommended for underwater camera use. Land shooting may require user to change some settings.

Please consult user manual for additional camera features and specifications.

Turn camera power on, press Menu button and toggle right to SETUP.

I. SETUP

<u>Card Format</u>	SD card format Caution: do this only to erase the card
<u>In Format</u> <u>memory</u>	Internal memory format Caution: this will erase the Internal
<u>LCD Brightness</u>	Set to brightest setting, press OK . Screen shows actual
	change.
<u>ISO Auto High</u>	Set to AUTO 400.
<u>Auto Power Off</u>	Set to OFF or as preferred
<u>Beep Sound</u>	Set to Shutter
<u>LCD Confirm</u>	Set to 3 sec.
<u>Adj. Button Setting</u>	This allows for ADJ quick settings to be set
	1. ADJ Lever 1 – Set to EXPO. CMP
	2. ADJ Lever 2 – Set to ISO
	3. ADJ Lever 3 – Set to WHT BAL
	4. ADJ Lever 4 – Set to QUALITY
<u>Adj. Shutter Button</u>	Off
<u>Functn. Btn. Set</u>	Off
<u>AF Aux Light</u>	Off
<u>RAW/JPEG Setting</u>	Fine
<u>Digital Zoom Image</u>	Normal
<u>Sequential number</u>	On
<u>USB Connection</u>	Mass Storage
<u>Date settings</u>	set date, time and format
<u>Video Out</u>	NTSC

Enter Shooting Settings by pressing Menu



II. SHTG STGS (Shooting Settings)

<u>Pic Quality/Size</u>	DX-1G: Choose F 3648 (10M) for jpg or RAW (10M) file DX-2G: Choose F 4000 (12M) for jpg or RAW (12M) file
<u>Focus</u>	Spot AF
<u>AE Metering</u>	Multi
<u>Cont. Mode</u>	Off
<u>IMG Set</u>	Normal or as preferred
<u>Auto Bracket</u>	Off
<u>Image w/Sound</u>	Off
<u>Date Imprint</u>	Off
<u>Exposure Comp</u>	0.00
<u>White Balance</u>	Cloudy
<u>ISO Setting</u>	100 for u/w with strobe
<u>Camera Shake</u>	Off

*Make sure camera flash is set to the lightening bolt icon for underwater strobe use.

The DX-1G/2G **does have a pre-flash and strobes should be set on Mode “2” or comparable pre-flash setting. Please consult the strobe user manual for further instructions.

***Macro setting shuts off when Review mode is used (not quick review). Remember to push the macro button after going into review mode.

Additional Recommendations:

Batteries:

1. Rechargeable Li-Ion DB-60 type battery is included, additional batteries are available from SEA&SEA (Part #DX-1G BATTERY)
2. Rechargeable AA Ni-MH batteries 2300 mA/H or higher recommended for external strobe.

Memory Card:

1. Up to 4GB for DX-1G and up to 16GB for DX-2G Secure Digital (SD) or SDHC card from major manufacturer such as SanDisk, Lexmark or others. SEA&SEA recommends purchasing more than 1 memory card.

Please consult <http://www.seaandsea.jp/dx1g/index.html> for additional setup and product information.