



## DX 8000G/ DX5000G Setup and Menu Settings

Insert batteries, insert 2GB or smaller SD card. Turn camera, on go to Mode Dial, turn to Setup menu (top of camera).

Following setup options are optimal for underwater camera use. Land shooting may require user to change some settings. Consult user manual.

### I. Setup menu

<u>Card Format</u>	SD card format <b>Caution: do this only to erase the card</b>
<u>In Format</u>	Internal memory format <b>Caution: this will erase the</b>
<u>Internal memory</u>	
<u>LCD Brightness</u>	Set for conditions as needed. Screen shows actual change.
<u>Adj. Button Set</u>	This allows for a 4 <sup>th</sup> setting on the ADJ button. 1. Resolution- icon looks like a speaker (thanks Jim). Most useful. 2. AF/MF switches auto focus to manual focus. 3. Sharp has the camera sharpen images. Bad idea! Slows processor. 4. Light meter setting
<u>Beep Sound</u>	Off. Cannot hear it underwater. Wastes battery.
<u>LCD Confirm</u>	3 sec
<u>Auto Power off</u>	5 minutes
<u>Sequential number</u>	on
<u>Power Save</u>	off
<u>Date settings</u>	set date, time and format
<u>Video Out</u>	NTSC
<u>Step Zoom</u>	off

Set mode dial to A/M for Aperture priority or Manual exposure mode. Push camera MENU button.

### Camera Menus

#### Menu 1

<u>Picture quality</u>	N3264 DX 8000G    N2592 DX 5000G
<u>Focus</u>	AF
<u>Photometry</u>	Multi: this is the exposure meter setting.
<u>Sharpness</u>	Normal: best not to sharpen in camera. Slows down processor



## Menu 2

Auto Bracket Off  
Manual Exposure Off, set this on the camera instead with the up/down dial.

## Menu 3

White Balance Sunny Day  
ISO 100 with UW strobe/ 200 for onboard flash  
Aperture Setting Half, best to set this on the camera with the up/down dial.  
Color Depth Vivid \*not available on DX 5000G

\*Make sure camera flash is set to the lightning bolt icon for underwater strobe use.

\*\*The DX-8000G **does have** a pre-flash and strobes should be set on "2" or comparable pre-flash setting.

\*\*\*Auto flash setting works with onboard camera flash only. No backlit subject.

\*\*\*\*Macro setting shuts off when Review mode is used (not quick review). Remember to push the macro button after going into review mode

## **Additional Recommendations:**

### Battery:

1. Rechargeable Li-Ion Ricoh DB-43 battery, available online at [www.bestbatt.com](http://www.bestbatt.com), [www.batteries.com](http://www.batteries.com) other OEM battery websites or local camera store.
2. Rechargeable AA Ni-MH batteries 2300 mAh.
3. AA alkaline batteries will not give optimal camera performance and flash recycle time.

### Memory Card:

1. 2GB or smaller Secure Digital (SD) card from major manufacturer. **Please note: 4GB 150x speed cards are not approved for use in the DX-8000G at this time.**